

# Suggested Tools

- Staple Gun(s)
- Staples
- Razor Blade(s)
- Needle Nose Pliers
- Small Bottle Jack

Not Pictured:

- 2 collapsible tables
- Hammer/Mallet
- 8" section of 2"x4" wood
- Printed layout of pad orientation



Official Signage  
Supplier to:



## Remove the Pads



Remove each pad and lean it against the wall in its original location.

Do not change the order of the pads.

You may need the bottle jack to “pop” the pad up out of the holders if dirt/debris has become lodged in the tracks. Place the bottle jack up against the wall, and ensure it will be pushing up on the plywood backing of the pad.



Official Signage  
Supplier to:



# Layout Pad #1



Place the first 2 pads side by side, one on each table. Work from the beginning of the graphic (left side) toward the end of the graphic (right side).

Lay the first pad wrap panel over the first pad. Align the panel using the supplied crop marks in the corners. Having an assistant to hold the pad wrap in place will speed up the process.

Once everything is lined up, put one staple in each end, pulling the graphic snug, but not overly tight.



Official Signage  
Supplier to:



## Attaching Pad Wrap #1



Flip the pad over after putting one staple in each side/corner to hold it in place.

Work from the center of the pad out, stapling the wrap every 4-6". Pull the wrap tight as you staple to prevent wrinkles/sagging.



Official Signage  
Supplier to:



# Pad Wrap Corners



Do NOT fold excess material onto sides of pad. Fold the excess corner material over the top/bottom of the pad.



4

Official Signage  
Supplier to:



# Lining Up Panels




Flip the first pad back over so the graphic side is facing up.

Take the second panel and lay it over the 2<sup>nd</sup> pad. Again, using the crop marks as guides, line up the panel.

Now line up the panel making sure any graphics/text line up with the previous panel.

Once you've lined up the second panel, put 3 staples in each end like you did on the first panel.

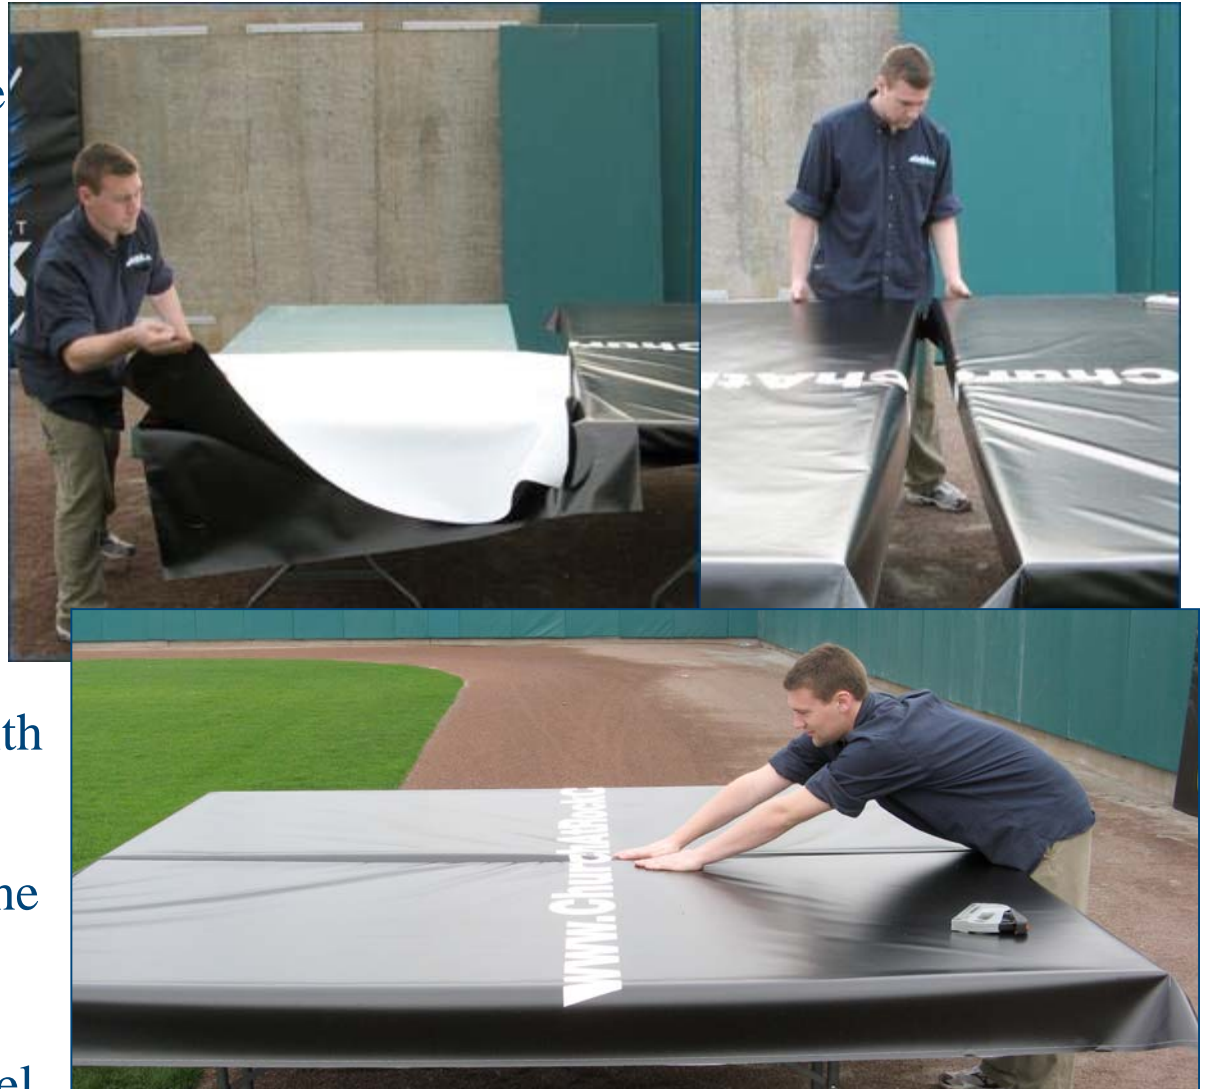

Official Signage  
Supplier to:



## Lining Up Panels Cont'd



You can now lay the first panel back up against the wall.

Flip over the second panel and attach the pad wrap as you did on panel #1.

Move the 2<sup>nd</sup> pad to the left table, and put the 3<sup>rd</sup> pad on the right hand table.

Now start the process of lining up the graphics like you did on panel 2, using the previous panel as a reference.



Official Signage  
Supplier to:



# Outfield Wall Layout



Once you've wrapped all the pads, you can lean them against the wall to see how the layout looks.

If everything is correct, begin installing the pads back onto the wall.



Official Signage  
Supplier to:



# Re-installing Pads



Once you've wrapped all the pads with the new graphics, line them up against the wall. Install the left (first) pad onto the wall.

Before re-installing the pads, it is suggested that you take a broom and clean out the hanging tracks of any dirt/debris/rocks that could prevent the pads from hanging evenly on the wall.



Use the large hammer/mallet to knock the pad to the left and make it tight with the existing pads on the wall.

Continue to hang one pad at a time, hammering them over to keep them tight together.